

INSTYLER®

Straight Away™
Hair Straightener Comb

User Manual

Thank you for
choosing InStyler®
Straight Away™ Hair
Straightener Comb!

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:
READ THESE INSTRUCTIONS BEFORE FIRST USING YOUR APPLIANCE

DANGER:

As with most electrical appliances, electrical parts are electrically live even when the switch is in the "OFF" position.

To reduce the risk of serious injury by electric shock:

1. Always unplug the appliance immediately after using.
2. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
3. If appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has been dropped, damaged, or dropped into water.
5. Keep the cord away from heated surfaces.
6. Do not wrap the cord around the appliance.
7. Do not use an extension cord with this appliance.
8. The InStyler® Straight Away™ Hair Straightener Comb is hot when in use. Do not let eyes and bare skin touch heated surfaces.
9. Do not use the appliance with any voltage converter.
10. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
11. Never use while sleeping.
12. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
13. Do not place this appliance directly on any surface while it is hot or plugged in.
14. Before using the appliance, no flammable materials such as hairspray, styling mousse etc. should be applied to your hair, as these may ignite when in contact with the comb.
15. DO NOT subject this product to excessive force or shock that may result in malfunction, shorter lifespan or distorted parts.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT:

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance can only be used on dry natural hair.
5. It should not be used on artificial hair.
6. It should not be used to straighten the hair of pets.
7. When the appliance is used for the first time, there may be a slight burnt smell or steam, which may be generated from remaining moisture or oil on metal parts of the appliance and will disappear in a few seconds.



WARNING:

Possible electric shock. Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins or other vessels containing water. Do not immerse in water or use while bathing.


KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE AND MAKE SURE ANYONE WHO USES THIS PRODUCT ALSO READS THIS MANUAL.

READ ALL INSTRUCTIONS BEFORE USING YOUR INSTYLER STRAIGHT AWAY COMB. NO ASSEMBLY REQUIRED.

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY



MAIN COMPONENTS

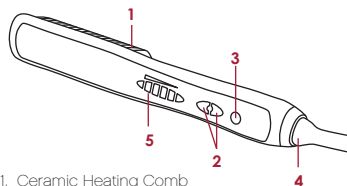

1. Ceramic Heating Comb
2. Temperature selection – UP/DOWN (6 heat settings)
3. Power ON/OFF Switch
4. 360° rotating cord
5. LED Temperature Indicator Light

OPERATION

Basic directions

1. Plug in the InStyler® Straight Away™ Hair Straightener Comb
2. Press ON/OFF Switch

Note: it will take approximately 1½ minutes for the InStyler Hair Straightener comb to be ready for use after turning it on.


3. Select/adjust temperature by pressing the "+" or "-" temperature selection buttons – see "Temperature Selection with 6 Heat Settings" section below
4. Use on dry hair only.
5. Brush the hair through entirely with the tool to provide smoother passes, avoid tangles and to achieve a smoother, shinier, and softer style.

Temperature selection with 6 heat settings

The default starting temperature of the appliance is set to level 4 (170°C). Adjust/select the temperature level by pressing the "+" or "-" temperature selection buttons based on your preference/ according to different hair types.

Note: The indicator light blinks until set temperature is reached. Start using once the indicator light stays on.

For safety, turn the ON/OFF switch off and unplug after use.

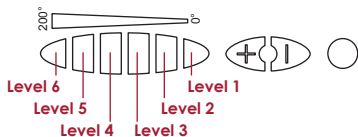

Level 1: 130°, for soft and thin hair.

Level 2: 150°, golden hair, bleached or dyed hair.

Level 3/4: 160°/170°, normal and slightly curly hair.

Level 5/6: 180°/200°, thick, curly or coarse hair.

BASIC DIRECTIONS FOR STYLING

1. Use the InStyler® Straight Away™ Hair Straightener Comb on DRY combed/brushed hair.
2. Divide the hair into sections. Do not use any hair spray, styling agent or other flammable chemical hair-care products.
3. Press a section of hair as firmly as possible into the teeth of the comb, then comb hair in a slow pulling motion from root to tip. Ensuring hair strands run through the heated teeth of the comb.



4. The teeth of the comb will automatically separate the hair to distribute the heat evenly and ensure a polished and smooth result.
5. Repeat the above actions until you obtain the results you desire.
6. While getting used to the new technology, start with small sections until you become more comfortable with the tool.

TIP: Depending upon your hair type, experiment with different heat settings for optimal results.

Care

- Always unplug the InStyler® Straight Away™ Hair Straightener Comb and let it cool down before cleaning.
- Do not rinse with water. It may damage the InStyler® Straight Away™ Hair Straightener Comb.
- Clean with soft damp cloth and wipe with a soft, dry cloth
- Do not use products that include benzene and/or paint thinner for it may damage the InStyler® Straight Away™ Hair Straightener Comb.
- Clean often to avoid collecting dust and hair.

Storage

Be sure to check the following before storing :

- Turn the ON/OFF switch off, and unplug.
- Be sure the comb has cooled off.
- Do not wrap cord around the InStyler® Straight Away™ Hair Straightener Comb
- Store in a cool dry place

Specifications, parameters and package

Input voltage: 220V-240V ~

Rated frequency: 50Hz

Heating way: PTC heating

Heating temperature: around 130°C—200°C
(6 levels adjustable)

Environmental protection

This product, its packing material and components are all made of recyclable materials. The wastes are divided into different recyclable grades so as to facilitate the recycling of usable materials.



Waste disposal

This symbol on the product or operating instruction or package indicates that, after the product's service life is finished, it cannot be regarded as general domestic waste for disposal. Please inquire with local government and conduct recycling treatment according to the classification of wastes.

The product pictures and introduction of relevant product properties as well as terminology indicated in the manual are only for reference. The physical product shall prevail.

Given our commitment to continuous improvement, we reserve the right to change the products' specification without prior notice.

ONE (1) YEAR LIMITED REPLACEMENT WARRANTY STATEMENT

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.

- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Your warranty is subject to the following conditions:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, **it must be replaced by a qualified electrician in order to avoid a hazard.** Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident. 17

Your warranty does not cover:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights. This warranty does not apply to accessories supplied with the item. This warranty applies only to the original purchaser and may not be transferred. Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

Please note: Only the defective product or parts returned to place of purchase will be replaced under this warranty.

New Zealand contact Brand Developers Limited

Unit H, 686 Rosebank Road, Avondale 1026,
Auckland, New Zealand
Private Bag 93204, Parnell, Auckland 1151
FAX: +64 9 306 8203

NZ Customer Care: 0800 002 999

Australia contact Brand Developers Aust Pty Ltd

461 Plummer Street, PORT MELBOURNE, VIC 3207
FAX: +61 3 9681 7825

AUS Customer Care: 1800 890 840



E1633



Made in China



BDV1